


## ARM Cortex™-M0 32-BIT MICROCONTROLLER

# NuTiny-SDK-120 User Manual For NuMicro™ NUC120 Series

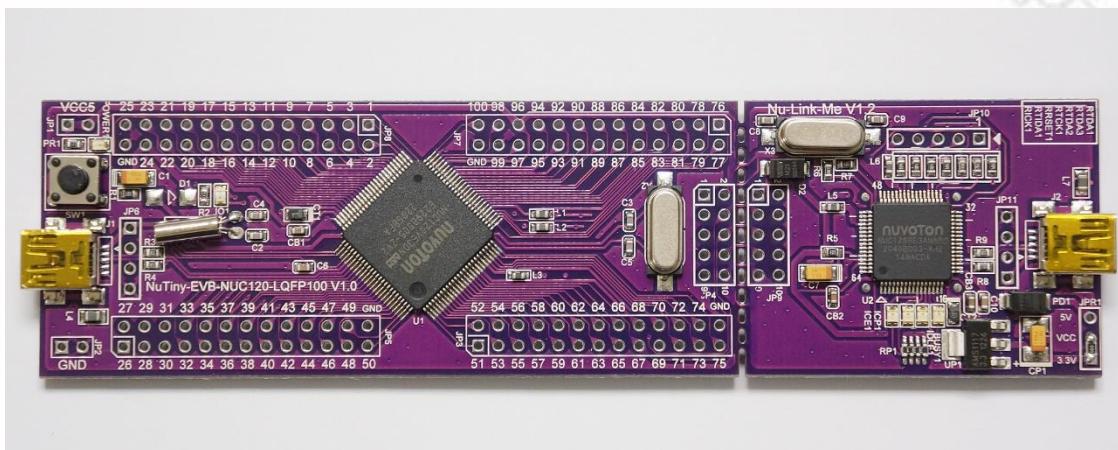

● MCU 별도구매 가능합니다.

**LogicTech Inc**

서울시구로구구로동615-3

STX W타워813-1호

Tel : 070-7526-1209

Fax : 070-2675-1209

Sales & Tech : [albatini.song@logictech.kr](mailto:albatini.song@logictech.kr)

커스터마이징 및 신규 개발 문의 환영합니다.

1	Overview .....	3
2	NuTiny-SDK-120 Introduction .....	3
2.1	NuTiny -SDK-120 Jumper Description .....	4
2.2	Pin Assignment for Extended Connector .....	5
2.3	NuTiny-SDK-120 PCB Placement .....	5
3	How to Start NuTiny -SDK-120 on the Keil µVision® IDE .....	6
3.1	Keil uVision® IDE Software Download and Install .....	6
3.2	Nuvoton Nu-Link Driver Download and Install .....	6
3.3	Hardware Setup .....	6
3.4	Smpl_NuTiny-NUC120 Example Program .....	7
4	How to Start NuTiny-SDK-120 on the IAR Embedded Workbench .....	8
4.1	IAR Embedded Workbench Software Download and Install .....	8
4.2	Nuvoton Nu-Link Driver Download & Install .....	8
4.3	Hardware Setup .....	8
4.4	Smpl_NuTiny-NUC120 Example Program .....	9
5	NuTiny-EVB-120 Schematic .....	10
6	To Download NuMicro™ Family Related Files from Nuvoton Company .....	11
6.1	To Download NuMicro™ Keil µVision® IDE driver .....	11
6.2	To Download NuMicro™ IAR EWARM driver .....	12
6.3	To Download NuMicro™ NUC120 series BSP Software Library .....	13
7	Revision History .....	14

## 1 Overview

NuTiny-SDK-120 is the specific development tool for NuMicro NUC120 series. Users can use NuTiny-SDK-120 to develop and verify the application program easily.

NuTiny-SDK-120 includes 2 portions. One is NuTiny-EVB-120 and the other is Nu-Link-Me. NuTiny-EVB-120 is evaluation board and Nu-Link-Me is its Debug Adaptor. Thus, users do not need other additional ICE or debug equipment.

## 2 NuTiny-SDK-120 Introduction

NuTiny-SDK-120 uses the NUC120LE3AN as the target microcontroller. Figure 2-1 is NuTiny-SDK-120 for NUC120 series and the left portion is called NuTiny-EVB-120 and the right portion is Debug Adaptor called Nu-Link-Me.

NuTiny-EVB-120 is similar to other development board. Users can use it to develop and verify applications to emulate the real behavior. The on board chip covers NUC120 series features. The NuTiny-EVB-120 can be a real system controller to design user target system.

Nu-Link-Me is a Debug Adaptor. **The Nu-Link-Me Debug Adaptor connects your PC's USB port to your target system (via Serial Wired Debug Port) and allows you to program and debug embedded programs on the target hardware.** To use Nu-Link-Me Debug adaptor with IAR or Keil, please refer to "Nuvoton NuMicro™ IAR ICE driver user manual "or Nuvoton NuMicro™ Keil ICE driver user manual" in detail. These 2 documents will be stored in local hard disk when user installs each driver.

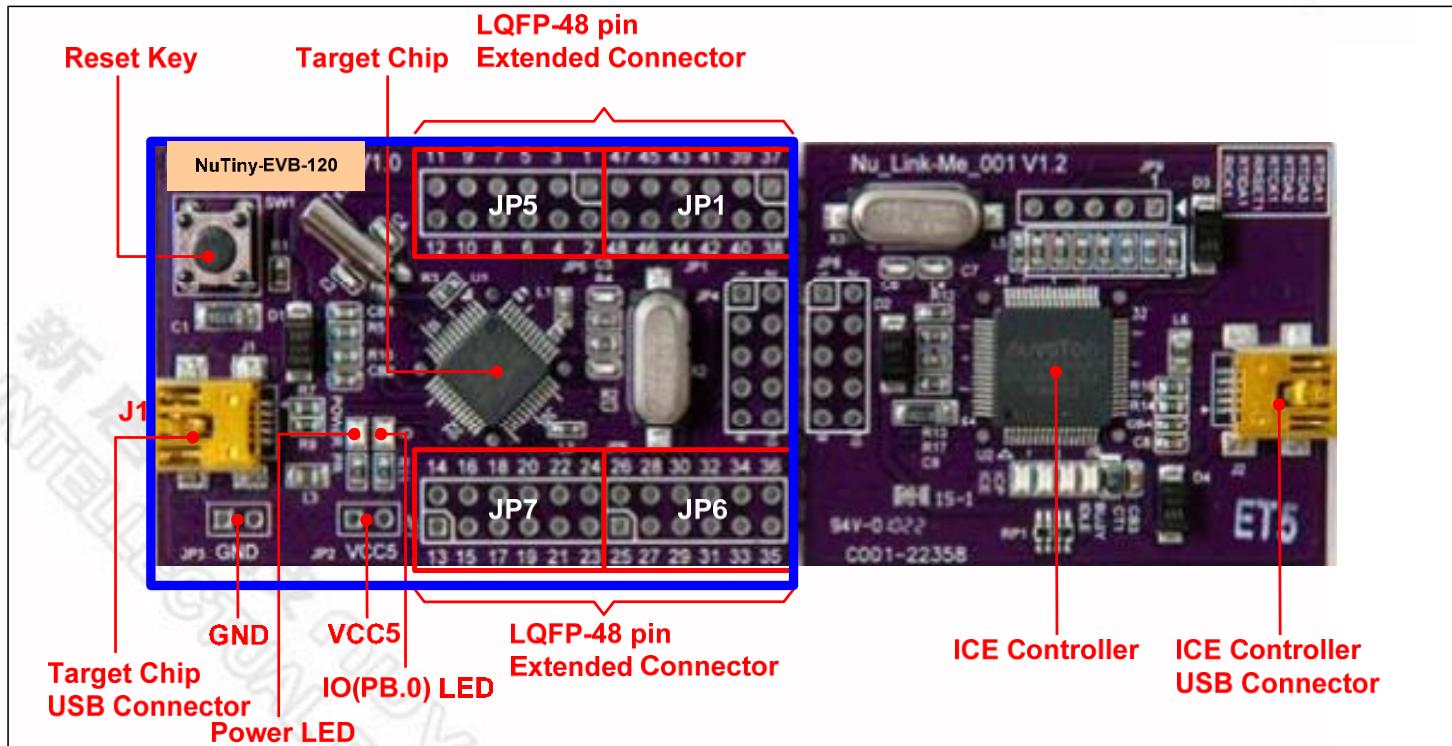


Figure 2-1 NuTiny-SDK-120 (Purple Color PCB Board)

## 2.1 NuTiny -SDK-120 Jumper Description

### 2.1.1 Power Setting

- J1: USB port in NuTiny-EVB-120
- JP2: VCC5 Voltage connector in NuTiny-EVB-120
- J2: USB port in Nu-Link-Me

POWER model	J1 USB port	J2 USB port	JP2 VCC5	MCU Voltage
Model 1	Connect to PC	X	DC 5V output	DC 5V
Model 2	X	Connect to PC	DC 5V output	DC 5V
Model 3	X	X	DC 2.8-5.5V input	Voltage by VCC input

X: Not use.

### 2.1.2 Debug Connector

- JP4: Connector in target board(NuTiny-EVB-120) for connecting with Nuvoton ICE adaptor (Nu-Link-Me)
- JP8: Connector in ICE adaptor (Nu-Link-Me) for connecting with a target board (for example NuTiny-EVB-120)

### 2.1.3 USB Connector

- J1: Mini USB Connector in NuTiny-EVB-100 for application use
- J2: Mini USB Connector in Nu-Link-Me connected to a PC USB port

### 2.1.4 Extended Connector

- JP1, JP5, JP6 and JP7: Show all of chip pins in NuTiny-EVB-120

### 2.1.5 Reset Button

- SW1: Reset button in NuTiny-EVB-120

### 2.1.6 Power Connector

- JP2: VCC connector in NuTiny-EVB-120
- JP3: GND connector in NuTiny-EVB-120

## 2.2 Pin Assignment for Extended Connector

NuTiny-EVB-120 provides NUC120LE3AN on board and the extended connector for LQFP-48 pin. Table 2-1 is the pin assignment for NUC120LE3AN.

Pin No	Pin Name	Pin No	Pin Name
01	PB.12, CPO0, CLKO	25	PA.15, PWM3, I2SMCLK
02	X32O	26	PA.14, PWM2,
03	X32I	27	PA.13, PWM1
04	PA.11, I2C1SCL	28	PA.12, PWM0
05	PA.10, I2C1SDA	29	ICE_DAT
06	PA.9, I2C0SCL	30	ICE_CLK
07	PA.8, I2C0SDA	31	AVSS
08	PB.4, RX1	32	PA.0, ADC0
09	PB.5, TX1	33	PA.1, ADC1
10	LDO	34	PA.2, ADC2
11	VDD	35	PA.3, ADC3
12	VSS	36	PA.4, ADC4
13	VBUS	37	PA.5, ADC5
14	VDD33	38	PA.6, ADC6
15	D-	39	PA.7, ADC7
16	D+	40	AVDD
17	PB.0, RX0	41	PC.7, CPN0
18	PB.1, TX0	42	PC.6, CPP0
19	PB.2, RTS0	43	PB.15, /INT1
20	PB.3, CTS0	44	XT1_OUT
21	PC.3, MOSI00, I2SDO	45	XT1_IN
22	PC.2, MISO00, I2SDI	46	/RESET
23	PC.1, SPICLK0, I2SBCLK	47	PVSS
24	PC.0, /SPISS00, I2SLRCLK	48	PB.8, STADC, TM0

Table 2-1 Pin Assignment for NUC 120 Series

## 2.3 NuTiny-SDK-120 PCB Placement

Users can refer Figure 2-2 for the NuTiny-SDK-120 PCB placements.

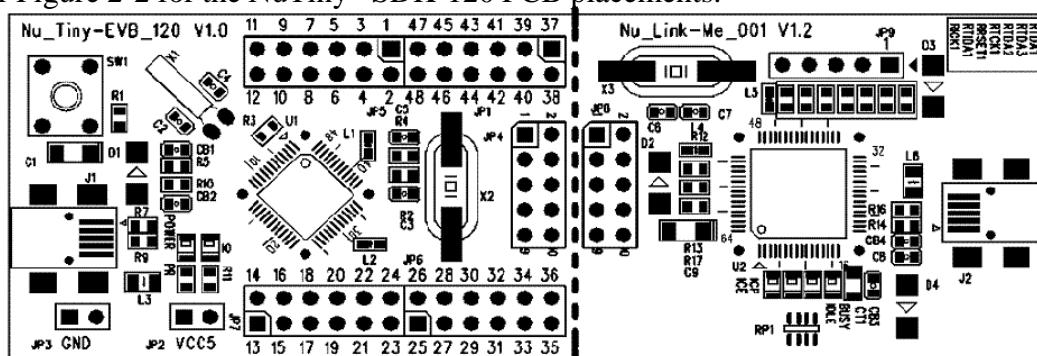


Figure 2-2 NuTiny-SDK-120 PCB Placement

### 3 How to Start NuTiny -SDK-120 on the Keil $\mu$ Vision<sup>®</sup> IDE

#### 3.1 Keil $\mu$ Vision<sup>®</sup> IDE Software Download and Install

Please visit the Keil company website (<http://www.keil.com>) to download the Keil  $\mu$ Vision<sup>®</sup> IDE and install the RVMDK.

#### 3.2 Nuvoton Nu-Link Driver Download and Install

Please visit the Nuvoton company NuMicro<sup>™</sup> website (<http://www.nuvoton.com/NuMicro>) to download “NuMicro<sup>™</sup> Keil  $\mu$ Vision<sup>®</sup> IDE driver” file. Please refer the Chapter 6.1 for the detail download flow. When the Nu-Link driver have been download ok, please unzip the file and execute the “Nu-Link\_Keil\_Driver.exe” to install the driver.

#### 3.3 Hardware Setup

The hardware setup is shown as Figure 3-1



Figure 3-1 NuTiny-SDK-120 Hardware Setup

### 3.4 Smpl\_NuTiny-NUC120 Example Program

This example demonstrates the ease of downloading and debugging an application on a NuTiny-SDK-120 board. It can be found on the Figure 3-2 list directory and downloaded from Nuvoton NuMicro™ Website following Chapter 6.3.

Directory	Project File

Figure 3-2 Smpl\_NuTiny\_120 Example Directory

To use this example:

The PB.0 LED will toggle on the NuTiny-EVB-120 board.

-  **Start μVision®**
-  **Project-Open**  
Open the Smpl\_NuTiny\_100.uvproj project file
-  **Project - Build**  
Compile and link the Smpl\_NuTiny-NUC100 application
-  **Flash – Download**  
Program the application code into on-chip Flash ROM

-  **Start debug mode**  
Using the debugger commands, you may:
  -  Review variables in the watch window
  -  Single step through code
  -  Reset the device
  -  Run the application

## 4 How to Start NuTiny-SDK-120 on the IAR Embedded Workbench

### 4.1 IAR Embedded Workbench Software Download and Install

Please connect to IAR company website (<http://www.iar.com>) to download the IAR Embedded Workbench and install the EWARM.

### 4.2 Nuvoton Nu-Link Driver Download & Install

Please connect to the Nuvoton Company NuMicro™ website (<http://www.nuvoton.com/NuMicro>) to download “NuMicro™ IAR ICE driver user manual” file. Please refer the 6.2 for the detail download flow. When the Nu-Link driver have been download ok, please unzip the file and execute the “Nu-Link\_IAR\_Driver.exe” to install the driver.

### 4.3 Hardware Setup

The hardware setup is shown as Figure 4-1



Figure 4-1 NuTiny- SDK-20 Hardware Setup

#### 4.4 Smpl\_NuTiny-NUC120 Example Program

This example demonstrates the ease of downloading and debugging an application on a NuTiny-SDK-120 board. It can be found on the Figure 4-2 list directory and downloaded from Nuvoton NuMicro™ Website following Chapter 6.3.

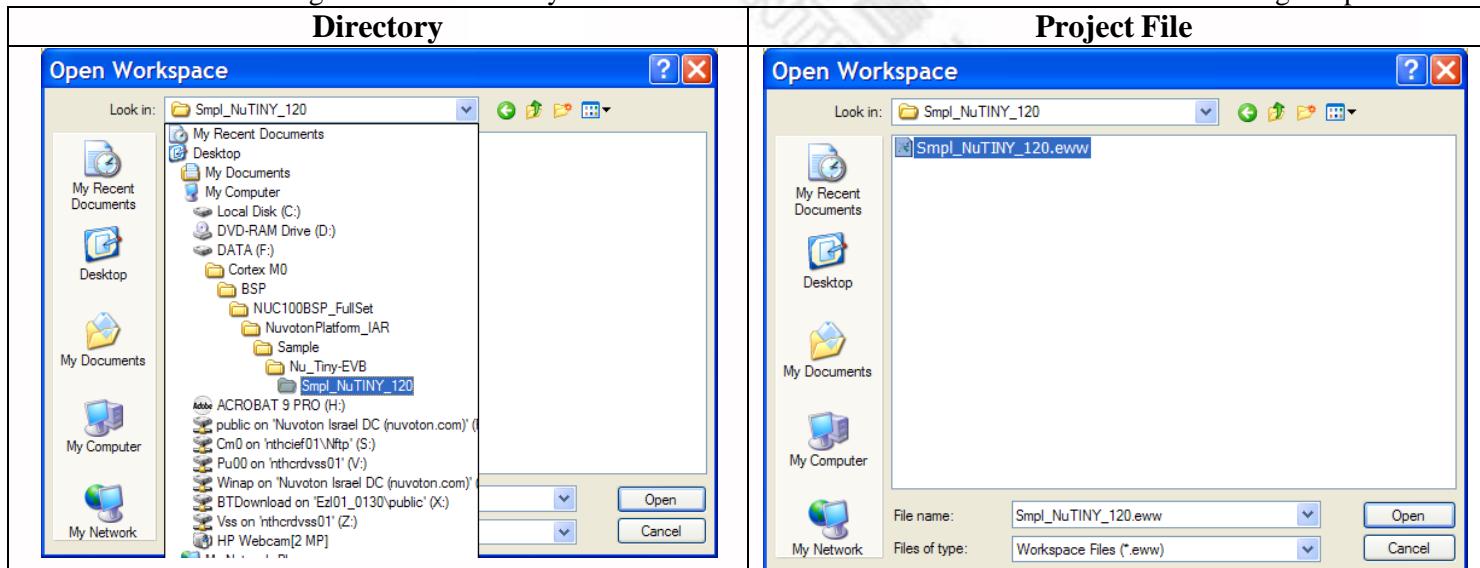


Figure 4-2 Smpl\_NuTiny-NUC120 Example Directory

To use this example:

The PB.0 LED will toggle on the NuTiny-EVB-120 board.

-  **Start IAR Embedded Workbench**
-  **File-Open-Workspace**  
Open the Smpl\_NuTiny\_100.eww workspace file



**Project - Make**  
Compile and link the Smpl\_NuTiny-100 application

-  **Project – Download and Debug**  
Program the application code into on-chip Flash ROM.



Single step through code




Reset the device



Run the application

## 5 NuTiny-EVB-120 Schematic

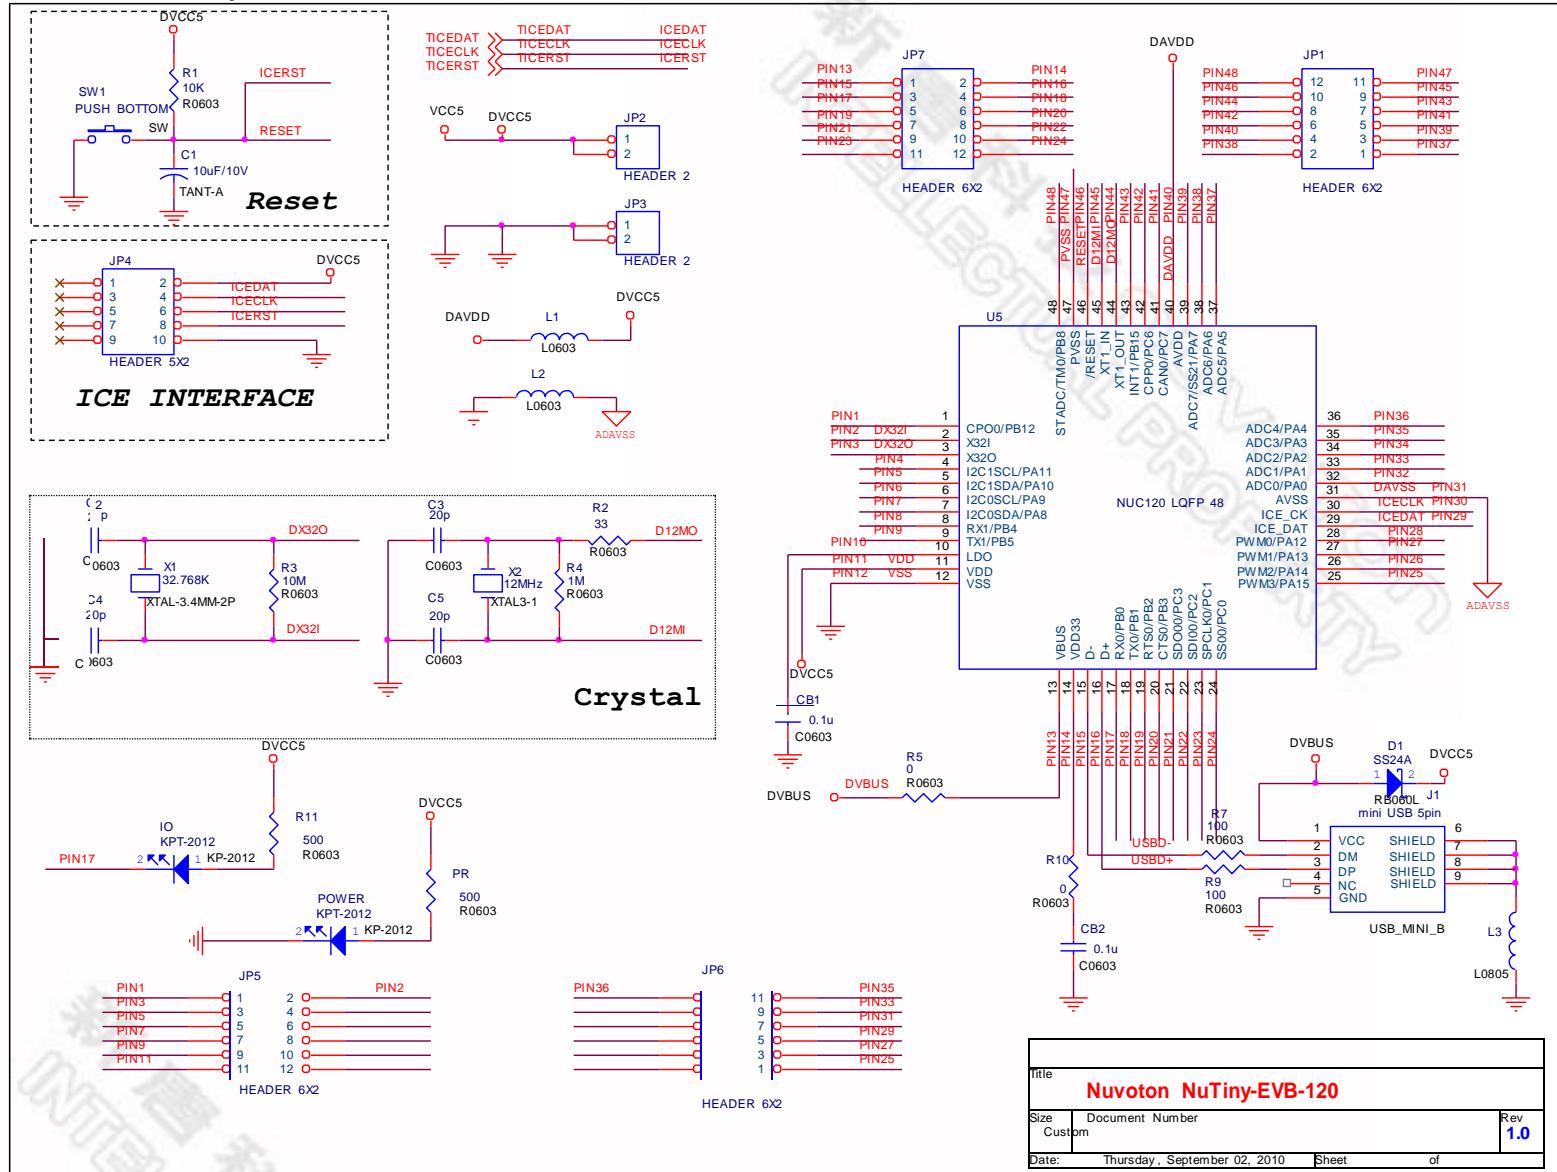

## 6 To Download NuMicro™ Family Related Files from Nuvoton Company

### 6.1 To Download NuMicro™ Keil µVision® IDE driver

Step1	To visit the Nuvoton NuMicro™ Website: <a href="http://www.nuvoton.com/NuMicro">http://www.nuvoton.com/NuMicro</a>																																
Step2																																	
Step 3	<table border="1" data-bbox="448 1129 1281 1404"> <tr> <td data-bbox="448 1129 546 1193">Nu-LB</td> <td data-bbox="546 1129 644 1193">» Nu-LB</td> <td data-bbox="644 1129 742 1193">NUC100 NUC120 NUC130 NUC140</td> <td data-bbox="742 1129 1085 1193"> <ul style="list-style-type: none"> <li>» A Starter Kit made by Nuvoton</li> <li>» Keil MDK-ARM (evaluation version) included</li> <li>» Examples with source code included</li> </ul> </td> <td data-bbox="1085 1129 1183 1193">  </td> <td data-bbox="1183 1129 1281 1193"><a href="#">Check Disty!</a></td> </tr> <tr> <td data-bbox="448 1193 546 1298">Nu-IAR-SKT</td> <td data-bbox="546 1193 644 1298"> <ul style="list-style-type: none"> <li>» EVB w/M-Link</li> <li>» USB Cable</li> <li>» Setup CD</li> </ul> </td> <td data-bbox="644 1193 742 1298">NUC100 NUC120 NUC130 NUC140</td> <td data-bbox="742 1193 1085 1298"> <ul style="list-style-type: none"> <li>» Starter Kit made by IAR</li> <li>» IAR EWARM (evaluation version) Included</li> <li>» IAR C/C++ Compiler included</li> <li>» USB Plug &amp; Play</li> </ul> </td> <td data-bbox="1085 1193 1183 1298">  </td> <td data-bbox="1183 1193 1281 1298"><a href="#">Buy Online!</a></td> </tr> <tr> <td data-bbox="448 1298 546 1404">Nu-Keil-SKT</td> <td data-bbox="546 1298 644 1404"> <ul style="list-style-type: none"> <li>» U-LINK-ME</li> <li>» MCBNUC1XX</li> <li>» USB Cable</li> <li>» Setup CD</li> </ul> </td> <td data-bbox="644 1298 742 1404">NUC100 NUC120 NUC130 NUC140</td> <td data-bbox="742 1298 1085 1404"> <ul style="list-style-type: none"> <li>» Starter Kit made by Keil</li> <li>» Keil MDK -ARM (evaluation version) included</li> <li>» ARM C/C++ Compiler included</li> <li>» USB Plug &amp; Play</li> </ul> </td> <td data-bbox="1085 1298 1183 1404">  </td> <td data-bbox="1183 1298 1281 1404"><a href="#">Check Disty!</a></td> </tr> </table> <p data-bbox="448 1425 563 1446"><b>File Download</b></p> <table border="1" data-bbox="448 1446 1281 1795"> <thead> <tr> <th data-bbox="448 1446 922 1488">File name</th> <th data-bbox="922 1446 1281 1488">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="448 1488 922 1531">  <a href="#">NUC1xx Quick Start Guide for Keil uVision4 V1.02.zip</a> </td> <td data-bbox="922 1488 1281 1531">Quick start guide using Keil™ RVMDK V1.00</td> </tr> <tr> <td data-bbox="448 1531 922 1573">  <a href="#">NuMicro Keil uVision® IDE driver (Build 4033) V1.02.zip</a> </td> <td data-bbox="922 1531 1281 1573">The Nuvoton NuMicro Keil uVision® Driver allows the Keil uVision® IDE to communicate with Nuvoton Nu-Link ICE bridge. V1.02</td> </tr> <tr> <td data-bbox="448 1573 922 1615">  <a href="#">NuMicro IAR Embedded Workbench® driver (Build 4033) V1.02.zip</a> </td> <td data-bbox="922 1573 1281 1615">The Nuvoton NuMicro IAR Embedded Workbench® driver allows the IAR Embedded Workbench IDE above v5.41 to communicate with Nuvoton Nu-Link ICE bridge. V1.02</td> </tr> <tr> <td data-bbox="448 1615 922 1657">  <a href="#">NuMicro ICP (Build 4033) V1.02.zip</a> </td> <td data-bbox="922 1615 1281 1657">NuMicro ICP tool &amp; user manual V1.02</td> </tr> <tr> <td data-bbox="448 1657 922 1700">  <a href="#">NUC1xx ISP V1.08.zip</a> </td> <td data-bbox="922 1657 1281 1700">NUC1xx ISP tool &amp; user manual V1.08</td> </tr> <tr> <td data-bbox="448 1700 922 1742">  <a href="#">NUC1xx Nu-EVB 001 Board Schematic v2.0.pdf</a> </td> <td data-bbox="922 1700 1281 1742">NUC1xx Nu-EVB 001 Board Schematic V2.0</td> </tr> </tbody> </table> <p data-bbox="1199 1404 1362 1467" style="border: 2px solid yellow; border-radius: 50%; padding: 5px; text-align: center;">To download the file</p>	Nu-LB	» Nu-LB	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>» A Starter Kit made by Nuvoton</li> <li>» Keil MDK-ARM (evaluation version) included</li> <li>» Examples with source code included</li> </ul>		<a href="#">Check Disty!</a>	Nu-IAR-SKT	<ul style="list-style-type: none"> <li>» EVB w/M-Link</li> <li>» USB Cable</li> <li>» Setup CD</li> </ul>	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>» Starter Kit made by IAR</li> <li>» IAR EWARM (evaluation version) Included</li> <li>» IAR C/C++ Compiler included</li> <li>» USB Plug &amp; Play</li> </ul>		<a href="#">Buy Online!</a>	Nu-Keil-SKT	<ul style="list-style-type: none"> <li>» U-LINK-ME</li> <li>» MCBNUC1XX</li> <li>» USB Cable</li> <li>» Setup CD</li> </ul>	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>» Starter Kit made by Keil</li> <li>» Keil MDK -ARM (evaluation version) included</li> <li>» ARM C/C++ Compiler included</li> <li>» USB Plug &amp; Play</li> </ul>		<a href="#">Check Disty!</a>	File name	Description	 <a href="#">NUC1xx Quick Start Guide for Keil uVision4 V1.02.zip</a>	Quick start guide using Keil™ RVMDK V1.00	 <a href="#">NuMicro Keil uVision® IDE driver (Build 4033) V1.02.zip</a>	The Nuvoton NuMicro Keil uVision® Driver allows the Keil uVision® IDE to communicate with Nuvoton Nu-Link ICE bridge. V1.02	 <a href="#">NuMicro IAR Embedded Workbench® driver (Build 4033) V1.02.zip</a>	The Nuvoton NuMicro IAR Embedded Workbench® driver allows the IAR Embedded Workbench IDE above v5.41 to communicate with Nuvoton Nu-Link ICE bridge. V1.02	 <a href="#">NuMicro ICP (Build 4033) V1.02.zip</a>	NuMicro ICP tool & user manual V1.02	 <a href="#">NUC1xx ISP V1.08.zip</a>	NUC1xx ISP tool & user manual V1.08	 <a href="#">NUC1xx Nu-EVB 001 Board Schematic v2.0.pdf</a>	NUC1xx Nu-EVB 001 Board Schematic V2.0
Nu-LB	» Nu-LB	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>» A Starter Kit made by Nuvoton</li> <li>» Keil MDK-ARM (evaluation version) included</li> <li>» Examples with source code included</li> </ul>		<a href="#">Check Disty!</a>																												
Nu-IAR-SKT	<ul style="list-style-type: none"> <li>» EVB w/M-Link</li> <li>» USB Cable</li> <li>» Setup CD</li> </ul>	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>» Starter Kit made by IAR</li> <li>» IAR EWARM (evaluation version) Included</li> <li>» IAR C/C++ Compiler included</li> <li>» USB Plug &amp; Play</li> </ul>		<a href="#">Buy Online!</a>																												
Nu-Keil-SKT	<ul style="list-style-type: none"> <li>» U-LINK-ME</li> <li>» MCBNUC1XX</li> <li>» USB Cable</li> <li>» Setup CD</li> </ul>	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>» Starter Kit made by Keil</li> <li>» Keil MDK -ARM (evaluation version) included</li> <li>» ARM C/C++ Compiler included</li> <li>» USB Plug &amp; Play</li> </ul>		<a href="#">Check Disty!</a>																												
File name	Description																																
 <a href="#">NUC1xx Quick Start Guide for Keil uVision4 V1.02.zip</a>	Quick start guide using Keil™ RVMDK V1.00																																
 <a href="#">NuMicro Keil uVision® IDE driver (Build 4033) V1.02.zip</a>	The Nuvoton NuMicro Keil uVision® Driver allows the Keil uVision® IDE to communicate with Nuvoton Nu-Link ICE bridge. V1.02																																
 <a href="#">NuMicro IAR Embedded Workbench® driver (Build 4033) V1.02.zip</a>	The Nuvoton NuMicro IAR Embedded Workbench® driver allows the IAR Embedded Workbench IDE above v5.41 to communicate with Nuvoton Nu-Link ICE bridge. V1.02																																
 <a href="#">NuMicro ICP (Build 4033) V1.02.zip</a>	NuMicro ICP tool & user manual V1.02																																
 <a href="#">NUC1xx ISP V1.08.zip</a>	NUC1xx ISP tool & user manual V1.08																																
 <a href="#">NUC1xx Nu-EVB 001 Board Schematic v2.0.pdf</a>	NUC1xx Nu-EVB 001 Board Schematic V2.0																																
Step 4	To download the NuMicro Keil µVision® IDE driver																																

## 6.2 To Download NuMicro™ IAR EWARM driver

Step1	<p>To visit the Nuvoton NuMicro™ Website: <a href="http://www.nuvoton.com/NuMicro">http://www.nuvoton.com/NuMicro</a></p>																																
Step2																																	
Step 3	<table border="1" data-bbox="437 1079 1274 1364"> <tr> <td data-bbox="437 1079 540 1174">Nu-LB</td> <td data-bbox="540 1079 626 1174">&gt; Nu-LB</td> <td data-bbox="626 1079 713 1174">NUC100 NUC120 NUC130 NUC140</td> <td data-bbox="713 1079 1078 1174"> <ul style="list-style-type: none"> <li>&gt; A Starter Kit made by Nuvoton</li> <li>&gt; Keil MDK-ARM (evaluation version) included</li> <li>&gt; Examples with source code included</li> </ul> </td> <td data-bbox="1078 1079 1181 1174"></td> <td data-bbox="1181 1079 1274 1174"><a href="#">Check Disty!</a></td> </tr> <tr> <td data-bbox="437 1174 540 1269">Nu-IAR-SKT</td> <td data-bbox="540 1174 626 1269"> <ul style="list-style-type: none"> <li>&gt; EVB w/M-Link</li> <li>&gt; USB Cable</li> <li>&gt; Setup CD</li> </ul> </td> <td data-bbox="626 1174 713 1269">NUC100 NUC120 NUC130 NUC140</td> <td data-bbox="713 1174 1078 1269"> <ul style="list-style-type: none"> <li>&gt; Starter Kit made by IAR</li> <li>&gt; IAR EWARM (evaluation version) Included</li> <li>&gt; IAR C/C++ Compiler included</li> <li>&gt; USB Plug &amp; Play</li> </ul> </td> <td data-bbox="1078 1174 1181 1269"></td> <td data-bbox="1181 1174 1274 1269"><a href="#">Buy Online!</a></td> </tr> <tr> <td data-bbox="437 1269 540 1364">Nu-Keil-SKT</td> <td data-bbox="540 1269 626 1364"> <ul style="list-style-type: none"> <li>&gt; U-LINK-ME</li> <li>&gt; MCBNUC1XX</li> <li>&gt; USB Cable</li> <li>&gt; Setup CD</li> </ul> </td> <td data-bbox="626 1269 713 1364">NUC100 NUC120 NUC130 NUC140</td> <td data-bbox="713 1269 1078 1364"> <ul style="list-style-type: none"> <li>&gt; Starter Kit made by Keil</li> <li>&gt; Keil MDK-ARM (evaluation version) included</li> <li>&gt; ARM C/C++ Compiler included</li> <li>&gt; USB Plug &amp; Play</li> </ul> </td> <td data-bbox="1078 1269 1181 1364"></td> <td data-bbox="1181 1269 1274 1364"><a href="#">Check Disty!</a></td> </tr> </table> <p><b>File Download</b></p> <table border="1" data-bbox="437 1417 1274 1755"> <thead> <tr> <th data-bbox="437 1417 931 1448">File name</th> <th data-bbox="931 1417 1274 1448">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="437 1448 931 1480"> NUC1xx Quick Start Guide for Keil uVision4 V1.00.zip</td> <td data-bbox="931 1448 1274 1480">Quick start guide using Keil® RVMDK V1.00</td> </tr> <tr> <td data-bbox="437 1480 931 1512"> NuMicro Keil uVision® IDE driver (Build 4033) V1.02.zip</td> <td data-bbox="931 1480 1274 1554">The Nuvoton NuMicro Keil uVision® Driver allows the Keil uVision® IDE to communicate with Nuvoton Nu-Link ICE bridge. V1.02</td> </tr> <tr> <td data-bbox="437 1554 931 1586"> NuMicro IAR Embedded Workbench® driver (Build 4033) V1.02.zip</td> <td data-bbox="931 1554 1274 1660">The Nuvoton NuMicro IAR Embedded Workbench® driver allows the IAR Embedded Workbench IDE above v5.41 to communicate with Nuvoton Nu-Link ICE bridge. V1.02</td> </tr> <tr> <td data-bbox="437 1660 931 1691"> NuMicro ICP (Build 4033) V1.02.zip</td> <td data-bbox="931 1660 1274 1691">NuMicro ICP tool &amp; user manual V1.02</td> </tr> <tr> <td data-bbox="437 1691 931 1723"> NUC1xx ISP V1.08.zip</td> <td data-bbox="931 1691 1274 1723">NUC1xx ISP tool &amp; user manual V1.08</td> </tr> <tr> <td data-bbox="437 1723 931 1755"> NUC1xx Nu-EVB 001 Board Schematic v2.0.pdf</td> <td data-bbox="931 1723 1274 1755">NUC1xx Nu-EVB 001 Board Schematic V2.0</td> </tr> </tbody> </table>	Nu-LB	> Nu-LB	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>&gt; A Starter Kit made by Nuvoton</li> <li>&gt; Keil MDK-ARM (evaluation version) included</li> <li>&gt; Examples with source code included</li> </ul>		<a href="#">Check Disty!</a>	Nu-IAR-SKT	<ul style="list-style-type: none"> <li>&gt; EVB w/M-Link</li> <li>&gt; USB Cable</li> <li>&gt; Setup CD</li> </ul>	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>&gt; Starter Kit made by IAR</li> <li>&gt; IAR EWARM (evaluation version) Included</li> <li>&gt; IAR C/C++ Compiler included</li> <li>&gt; USB Plug &amp; Play</li> </ul>		<a href="#">Buy Online!</a>	Nu-Keil-SKT	<ul style="list-style-type: none"> <li>&gt; U-LINK-ME</li> <li>&gt; MCBNUC1XX</li> <li>&gt; USB Cable</li> <li>&gt; Setup CD</li> </ul>	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>&gt; Starter Kit made by Keil</li> <li>&gt; Keil MDK-ARM (evaluation version) included</li> <li>&gt; ARM C/C++ Compiler included</li> <li>&gt; USB Plug &amp; Play</li> </ul>		<a href="#">Check Disty!</a>	File name	Description	 NUC1xx Quick Start Guide for Keil uVision4 V1.00.zip	Quick start guide using Keil® RVMDK V1.00	 NuMicro Keil uVision® IDE driver (Build 4033) V1.02.zip	The Nuvoton NuMicro Keil uVision® Driver allows the Keil uVision® IDE to communicate with Nuvoton Nu-Link ICE bridge. V1.02	 NuMicro IAR Embedded Workbench® driver (Build 4033) V1.02.zip	The Nuvoton NuMicro IAR Embedded Workbench® driver allows the IAR Embedded Workbench IDE above v5.41 to communicate with Nuvoton Nu-Link ICE bridge. V1.02	 NuMicro ICP (Build 4033) V1.02.zip	NuMicro ICP tool & user manual V1.02	 NUC1xx ISP V1.08.zip	NUC1xx ISP tool & user manual V1.08	 NUC1xx Nu-EVB 001 Board Schematic v2.0.pdf	NUC1xx Nu-EVB 001 Board Schematic V2.0
Nu-LB	> Nu-LB	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>&gt; A Starter Kit made by Nuvoton</li> <li>&gt; Keil MDK-ARM (evaluation version) included</li> <li>&gt; Examples with source code included</li> </ul>		<a href="#">Check Disty!</a>																												
Nu-IAR-SKT	<ul style="list-style-type: none"> <li>&gt; EVB w/M-Link</li> <li>&gt; USB Cable</li> <li>&gt; Setup CD</li> </ul>	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>&gt; Starter Kit made by IAR</li> <li>&gt; IAR EWARM (evaluation version) Included</li> <li>&gt; IAR C/C++ Compiler included</li> <li>&gt; USB Plug &amp; Play</li> </ul>		<a href="#">Buy Online!</a>																												
Nu-Keil-SKT	<ul style="list-style-type: none"> <li>&gt; U-LINK-ME</li> <li>&gt; MCBNUC1XX</li> <li>&gt; USB Cable</li> <li>&gt; Setup CD</li> </ul>	NUC100 NUC120 NUC130 NUC140	<ul style="list-style-type: none"> <li>&gt; Starter Kit made by Keil</li> <li>&gt; Keil MDK-ARM (evaluation version) included</li> <li>&gt; ARM C/C++ Compiler included</li> <li>&gt; USB Plug &amp; Play</li> </ul>		<a href="#">Check Disty!</a>																												
File name	Description																																
 NUC1xx Quick Start Guide for Keil uVision4 V1.00.zip	Quick start guide using Keil® RVMDK V1.00																																
 NuMicro Keil uVision® IDE driver (Build 4033) V1.02.zip	The Nuvoton NuMicro Keil uVision® Driver allows the Keil uVision® IDE to communicate with Nuvoton Nu-Link ICE bridge. V1.02																																
 NuMicro IAR Embedded Workbench® driver (Build 4033) V1.02.zip	The Nuvoton NuMicro IAR Embedded Workbench® driver allows the IAR Embedded Workbench IDE above v5.41 to communicate with Nuvoton Nu-Link ICE bridge. V1.02																																
 NuMicro ICP (Build 4033) V1.02.zip	NuMicro ICP tool & user manual V1.02																																
 NUC1xx ISP V1.08.zip	NUC1xx ISP tool & user manual V1.08																																
 NUC1xx Nu-EVB 001 Board Schematic v2.0.pdf	NUC1xx Nu-EVB 001 Board Schematic V2.0																																
Step 4	<p>To download the NuMicro™ IAR Embedded Workbench® driver</p>																																

### 6.3 To Download NuMicro™ NUC120 series BSP Software Library

Step1	<p>To visit the Nuvoton NuMicro™ Website: <a href="http://www.nuvoton.com/NuMicro">http://www.nuvoton.com/NuMicro</a></p>
Step2	<p>Click here to enter Software Library page</p>  <p>ARM Cortex™-M0 NuMicro® Family</p> <p>NuMicro® Family is Nuvoton's brand-new 32-bit Microcontroller product line based on the ARM® Cortex™-M0 processor with rich peripherals to offer superb features and connectivity capability. Besides the NUC100, NUC120, NUC130 and NUC140 series, a new series the NuMicro M051™ series, including the M052/54/58/516 is to satisfy the worldwide customers' 8-bit/16-bit microcontroller demand with a higher performance of a 32-bit microcontroller.</p>  <p><b>NuMicro® Family</b></p> <p>M051 Base Line</p> <p>Up to 64KB Flash ROM   Up to 4KB SRAM</p> <p>• NuMicro M051 •</p> <p>Cortex-M0</p> <p>UART</p>
Step 3	<p>To download the NuMicro™ NUC100 series software library</p>

## 7 Revision History

Version	Date	Page	Description
1.0	Aug. 20, 2010	--	Initial Release

### Important Notice

Nuvoton products are not designed, intended, authorized or warranted for use as components in systems or equipment intended for surgical implantation, atomic energy control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, combustion control instruments, or for other applications intended to support or sustain life. Further more, Nuvoton products are not intended for applications wherein failure of Nuvoton products could result or lead to a situation wherein personal injury, death or severe property or environmental damage could occur.

Nuvoton customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify Nuvoton for any damages resulting from such improper use or sales.

---

Please note that all data and specifications are subject to change without notice. All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.